

FORCE BATTERS™ STAR WARS®



WARNING:

CHOKING HAZARD-Small parts.
Not for children under 3 years.

AGES 4+

87073/85179 Asst.

Hold lower body. Twist upper body and release for whirling lightsaber attack.




QUICK-CHANGE
ACTION!

EMPEROR
PALPATINE™

Insert Force lightning
into robe sleeve.



Press
button
to launch.

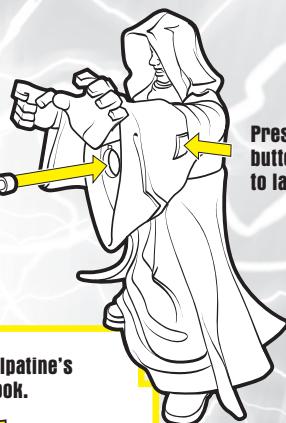

THUMBWHEEL

Turn thumbwheel to change Palpatine's
face to Force-damaged look.



Remove lightsaber blade to show lightsaber in
"deactivated" mode. Re-attach blade for "activated" mode.



Some poses may require additional support.

Product and colors may vary.

© 2005 Lucasfilm Ltd. & ® or TM where indicated. All Rights Reserved.

® and/or ™ & © 2005 Hasbro. All Rights Reserved.

TM & ® denote U.S. Trademarks.

P/N 6532890000

Visit



starwars.hasbro.com
TM *